

SMT-W5100E Handset

Quick User Guide



SAMSUNG

 
TO TURN THE POWER ON/OFF

Press the  button for more than 2 seconds.

MAKING A CALL

Dial the phone number by pressing the Dial buttons.

Press the  button to dial or

Press the  button to delete the last digit.

ANSWERING A CALL

Press the  button to answer an incoming call.

END A CALL

Press the  button to end a call.

REDIAL

Press the  button to review the list.

Press the  button to move to the item.

Press the  button to dial.

ADJUST THE INCOMING CALL RING TONE

Press the  button.

Select **1. Incoming Calls** and press .

Select **3. Ring Volume** and press .

Select  or  to the desirable level and press .

Press the  button to return to the idle screen.

ADJUST CONVERSATION VOLUME

Press the  or  key to adjust the volume while in a call.

TO USE SPEAKER PHONE

Press the  button for more than 2 seconds while in conversation mode.

TO CHECK VOICE MAIL

Press the  button.

Select **2. VMS** and press .

Select **1. Message** and press .

Note: Default voice mail password is 0000.

TO RECEIVE CALL WAITING/CAMP ON

Press  button and then  button.

HOLD ON/OFF A CALL

Press  button while in a conversation.

CALL FORWARD BUSY AND NO ANSWER TO THE VOICE MAIL

Press the  button.

Select **6. Call Forward** and press .

Select **3. Busy Calls** and press .

Enter _____ (voice mail access number) and press .

Select **4. No Answer** and press .

Enter _____ (voice mail access number) and press .

Press **5. Busy/No Answer** and press .

Press the  button to return to idle screen.

The screen will display “FWD”.

LOCK/UNLOCK KEYPAD

Press and hold  button for 2 seconds.

MUTE ON/OFF

Press  button while in conversation, and select **1. Mute**.

Note: Password for the phone setting is 0000.



www.samsung.com/bcs

©2006 Samsung Telecommunications America, L.P.

Samsung is a registered trademark of Samsung Electronics America, Inc., and its entities.